



*Installation Instructions for
the Smart Car Cold Air Intake*

Removing the Stock Air Filter


2008:

1. Remove stock air filter box and baffle box.

This should consist of four T-30 screws and two clamps. It will come out in three pieces

2009-2010:

1. All of the above plus...There is a bolt that is accessed from the underside of the car that holds a long skinny bracket. This bolt needs to be removed for the filter housing to be removed from the car.
2. Once you have **ALL** bolts and clamps removed you can start taking the stock air intake system out piece by piece. It will be tight but it will come out!

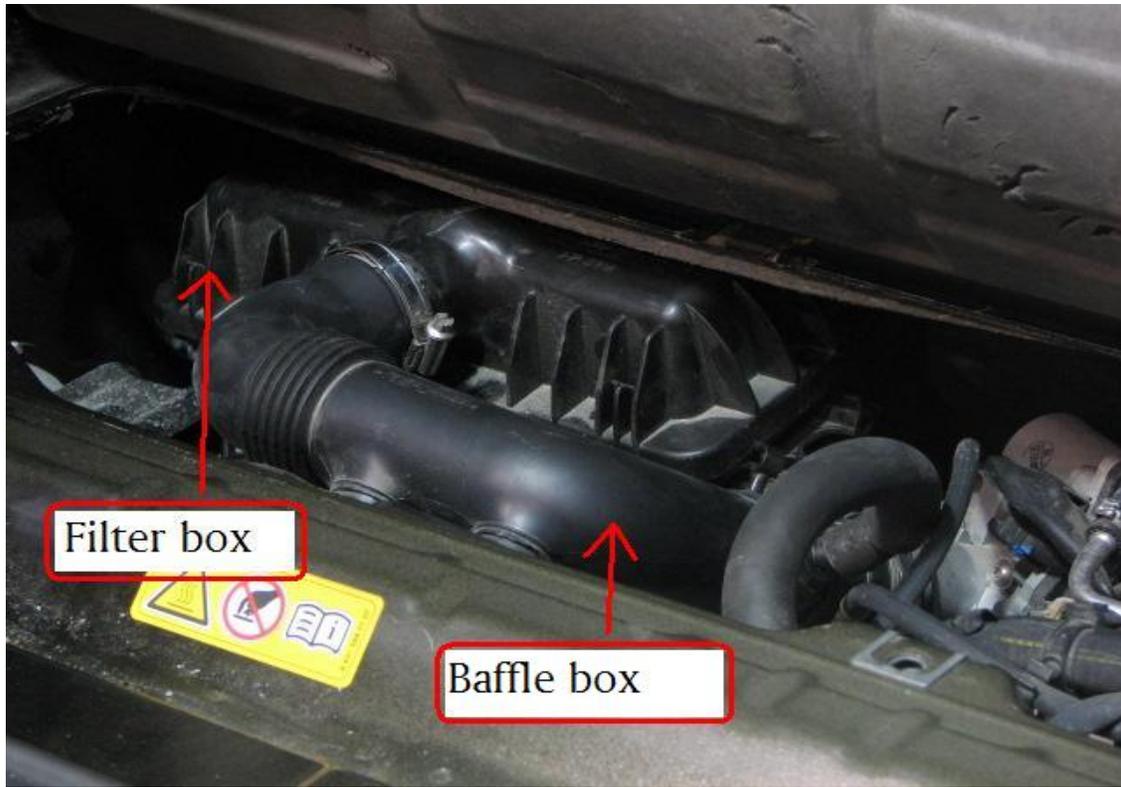



Installation Instructions for the Smart Car Cold Air Intake

Installing your Cold Air Intake from B2 Fabrication :

Your new intake will arrive pre assembled.

You will have to loosen up the two T-bolt clamps that hold the black silicone hose in place.

To do this you will need a 10mm socket.

1. To put the new intake in place, slide the silicone sleeve over the factory throttle body and then bolt the mounting tab in place with the supplied bolt, washers, and rubber isolators.
2. To insure maximum performance, please make sure that the air inlet from the left hand side of the car fits into your new air filter housing.
3. Tighten the bolt and the two clamps.
4. Then plug the vacuum hose on to the provided nipple.
5. Give everything a “once over,” to make sure it’s tight.

That’s it, you’re done!

Be sure to clean out your air filter 6 months or so to ensure maximum air flow.



Trouble Shooting

If you ever hear a rattle coming from your engine compartment it may be the air filter cover bumping against the frame. To fix this you will need to simply loosen up one of the clamps holding the intake system to the throttle body. Then place your left hand in between the frame of the car and the air filter housing while with your right hand re-tightens the clamp allowing adequate clearance for the filter housing stopping any kind of rattle.